


Sonosite PX Stand and Accessory Assembly Instructions

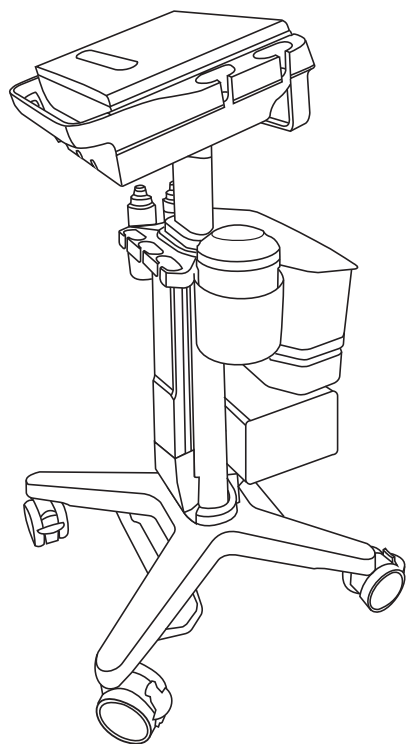


Inside the boxes	2
Main box.....	2
Stand head box.....	2
System box	2
Kit 1	2
Kit 1 continued	3
Kit 2	3
Printer box	3
Unpack the boxes	4
Attach the storage tray	4
Install the printer	5
Secure the column	6
Remove packaging	6
Connect the stand battery	7
Install covers over power receptacles	8
Attach the storage container, drawer, and cord wrap hooks	9
Attach the gel and wipe holders	9
Attach the cable management system	10
Raise the column	11
Install the platform	11
Connect the stand and printer to power	13

Inside the boxes


Main box

Column and base with battery pack

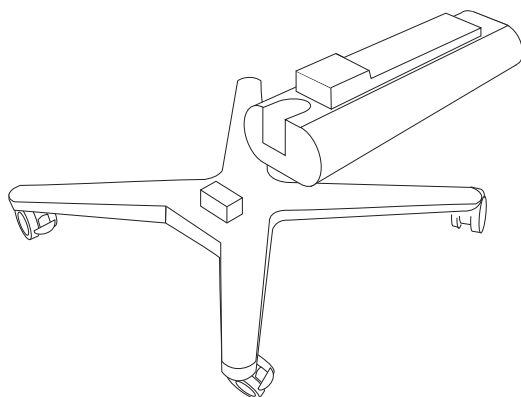


Stand head box

Stand head

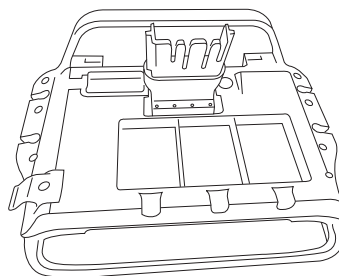


System box

Power cord

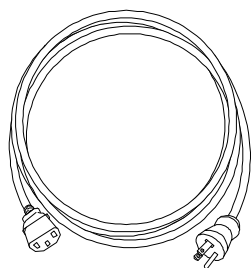

Kit 1

 Magnetic bit driver



3 mm, 4 mm, and 5 mm
hex bits (1 each)




#1 Phillips bit



 
M4 x 20 mm hex-
head screws (2)




M6 x18 mm hex-
head screws (4)



M3 x 8 mm Phillips-
head screws (4)

 


Rear base cover

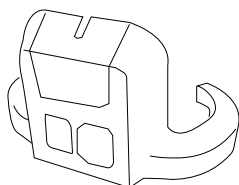


Power cord wrap hook



 Outlet cover




Cable stay mount

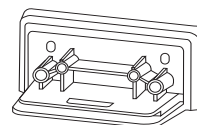


Kit 1 continued


Gel bottle holder

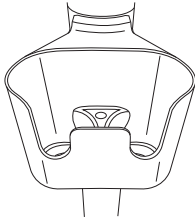


Lockable storage drawer

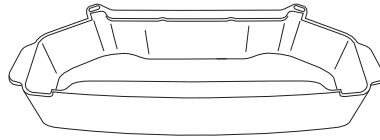


Wipe holder

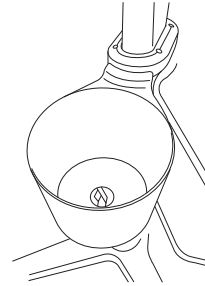


Bottom cover

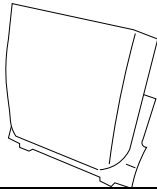

 Cable management system mounting bracket




Cable management system cover

 


Kit 2

Storage container with power cord wrap

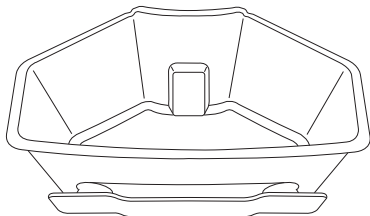


Storage tray

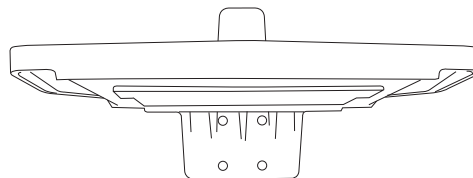


Printer box

Printer and user documentation

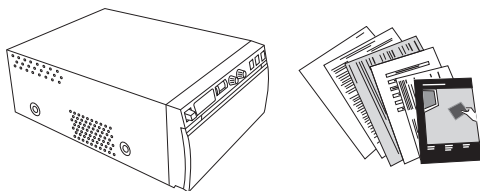

Printer mounting bracket and box

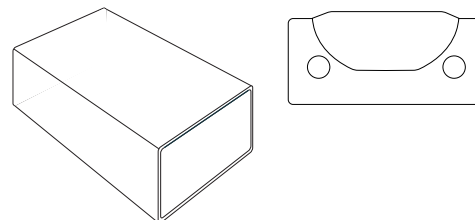


Prying tool



Hex wrench



 
M6 x18 mm hex-head screws (4)



Unpack the boxes


STEP 1

Remove the upper part of the box.

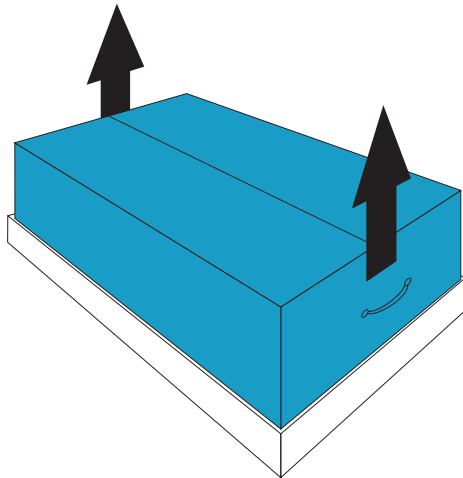

STEP 2


Unpack the inner boxes and remove the cardboard packing material.

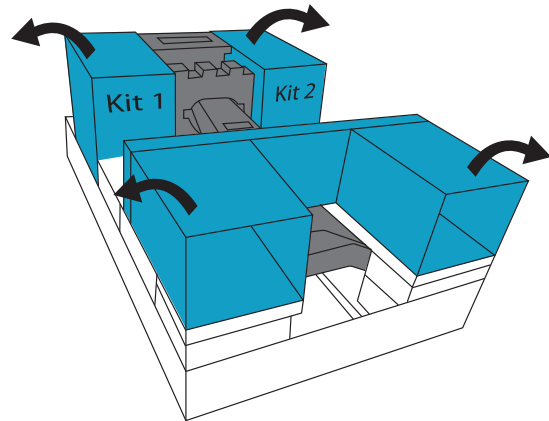

Attach the storage tray

STEP 3


Insert the 5 mm hex bit into the bit driver and Use the four hex-head 18 mm long screws to attach the tray to the back of the stand column.

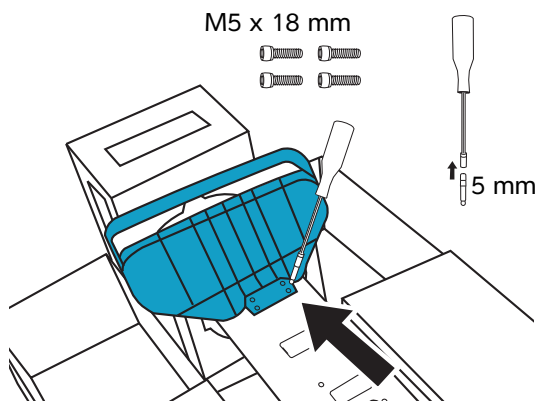

Install the printer


STEP 4

Slide the printer into the mounting box.

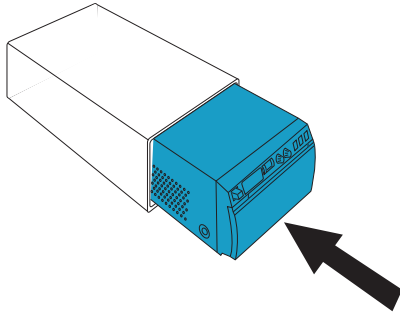


STEP 5

Use the bit driver with the Phillips bit to tighten the four screws on the bottom of the mounting box.

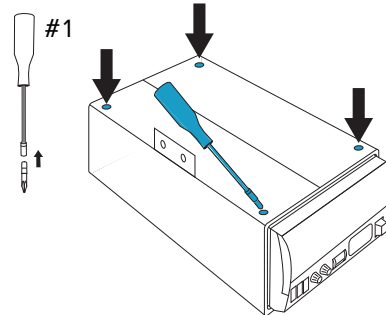


STEP 6

Remove the cover on the stand column.

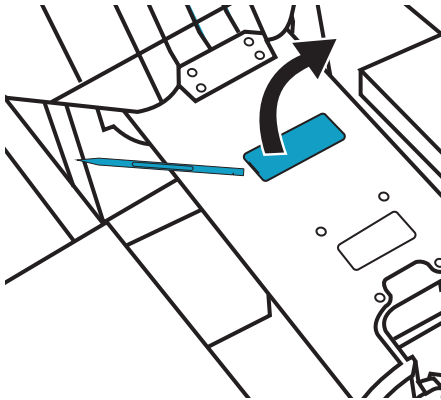


STEP 7

Use the bit driver with the 4 mm bit and the hex-head 18 mm screws to attach the printer mounting bracket to the stand.

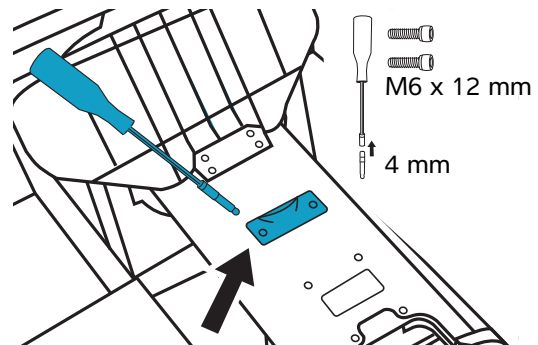


STEP 8

Slide the lip of the mounting box down onto the mounting bracket.

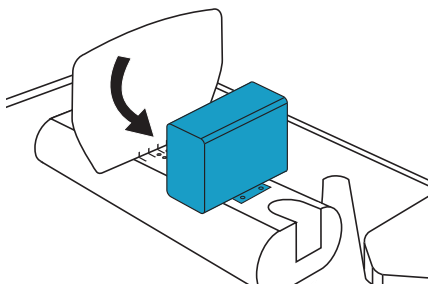

STEP 9


Tighten the screws located under the printer.

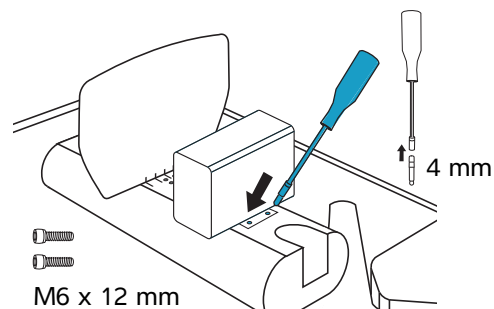

Secure the column


STEP 10

Raise the column upright.

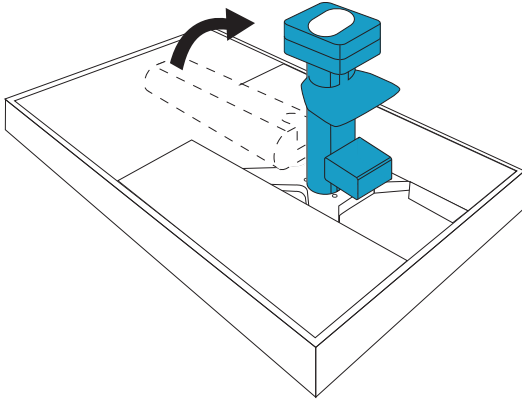

STEP 11


Use the bit driver with the 5 mm bit to tighten the four screws on the base of the column.

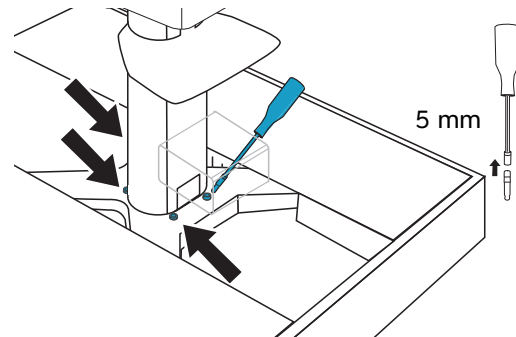

Remove packaging


STEP 12

Remove the packing foam from on and around the stand.

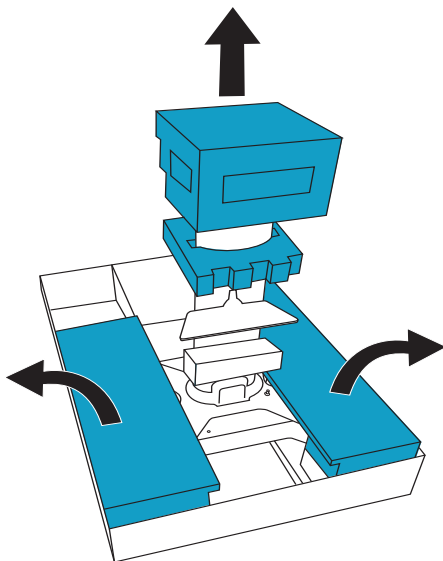


STEP 13

Cut the tape holding the front flap of the box up and lower the flap to the floor.

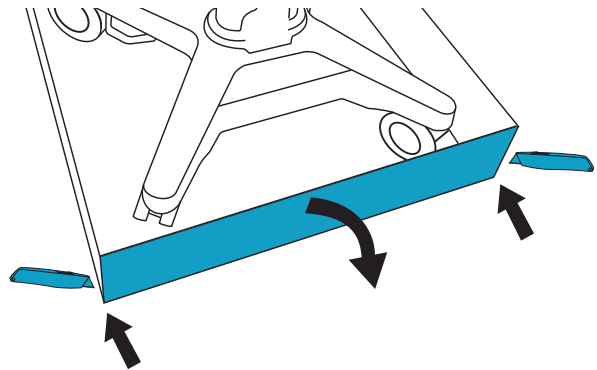


STEP 14

Roll the stand out of the packing box.

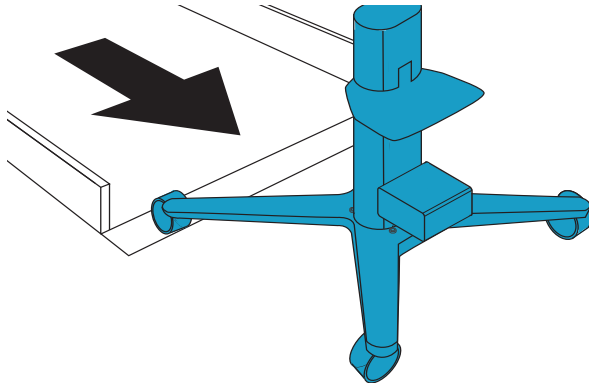

STEP 15


Lock the wheels on the side of the storage tray.

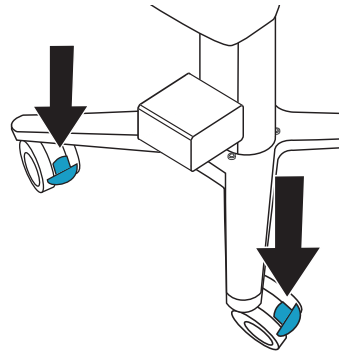

Connect the stand battery


STEP 16

Align the cable connectors with the corresponding connectors on the bottom of the battery pack.

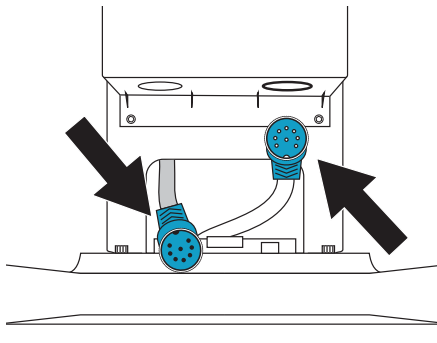


STEP 17

Push the cable connectors into place.

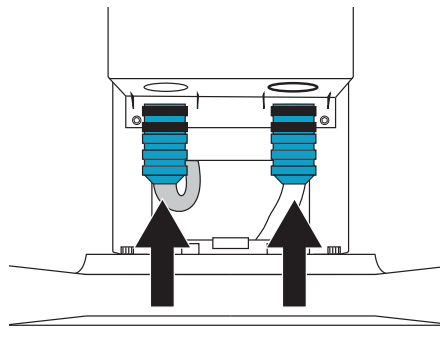

STEP 18

Screw the cable connectors clockwise to tighten.

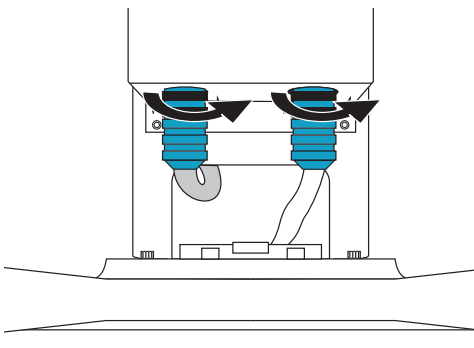


STEP 19

Install covers over power receptacles


STEP 20

Fit the rear base cover around the stand column above the power plugs, then press the cover straight down with equal pressure on both sides until it snaps into place.

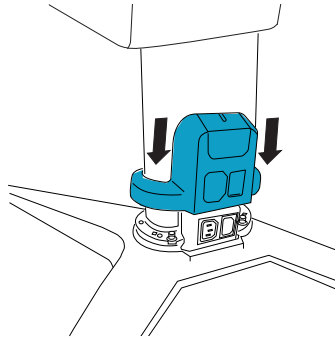


STEP 21

If you are not installing a printer, use the outlet cover to block the printer power outlet.

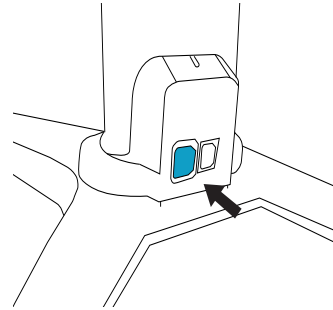

STEP 22


Install the cover at the bottom of the battery.

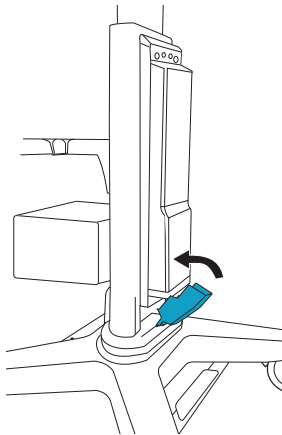

Attach the storage container, drawer, and cord wrap hooks


STEP 23

Slide the storage container down over the tongue of the storage tray until it is resting on the tray.

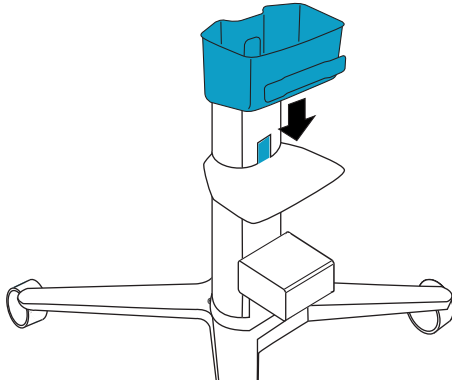


STEP 24

Slide the drawer into the slots on the underside of the tray.

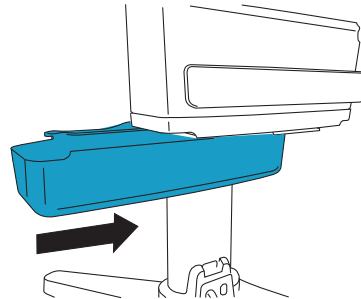

STEP 25


Slip the hook over the edge of the cord wrap on the front of the storage container.

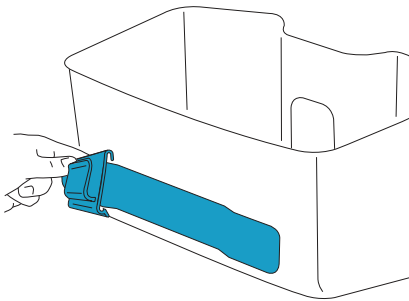

Attach the gel and wipe holders


STEP 26

Slide the gel bottle holder down onto one of the mounting brackets on either side of the column.

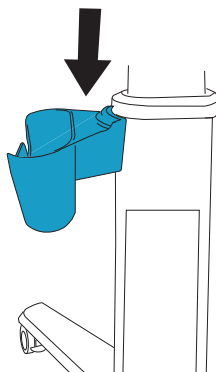

STEP 27


Slide the wipe holder down onto one of the mounting brackets on either side of the column.

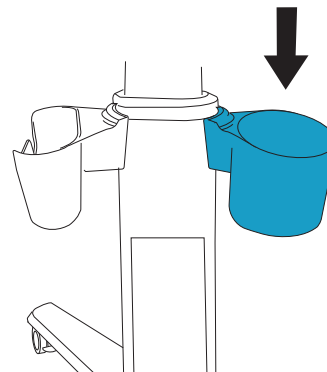

Attach the cable management system


STEP 28

Snap the cable management bracket into position on top of the battery pack.

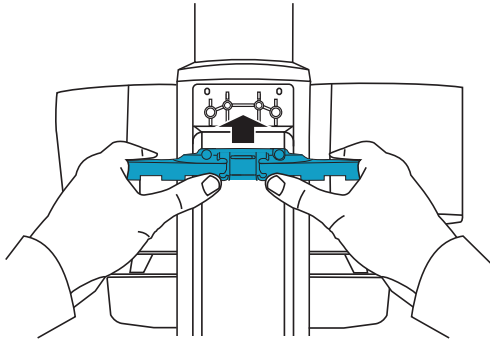


STEP 29

Attach the cable management bracket to the column using the bit driver with the Phillips bit and the two 8 mm screws.

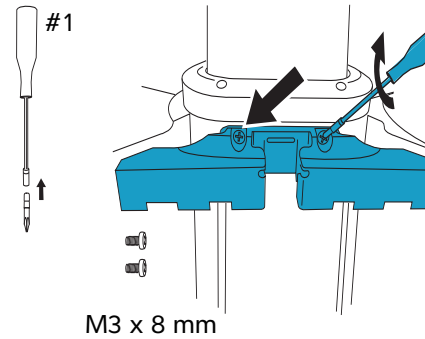

STEP 30


Slide the cable management cover down over the top of the cable management bracket until it snaps into place.

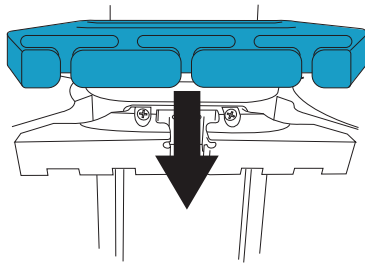

Raise the column

STEP 31


Remove the hook and loop shipping strap that is immobilizing the foot pedal.

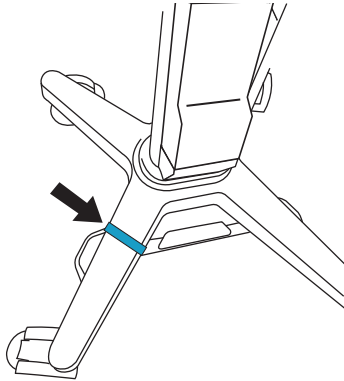

To avoid the column rising too quickly, place a hand on top.

STEP 32


Place a hand on top of the column to prevent it from rising too quickly. Press the foot pedal to raise the inner column partway.

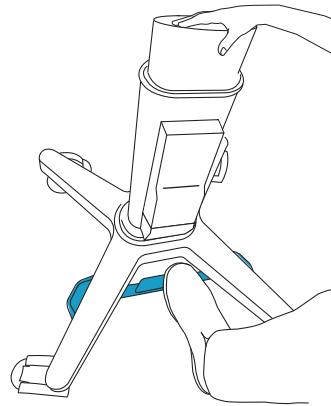


Install the platform

STEP 33

Insert the platform pedestal into the inner stand column. Use the bit driver with the 4 mm bit to tighten the four screws on the platform.

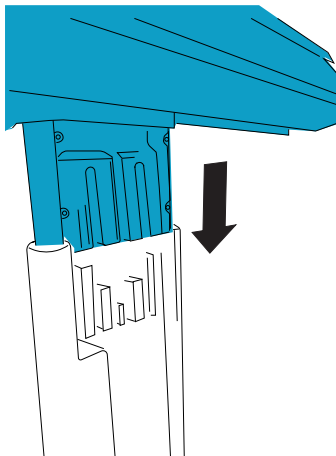


STEP 34

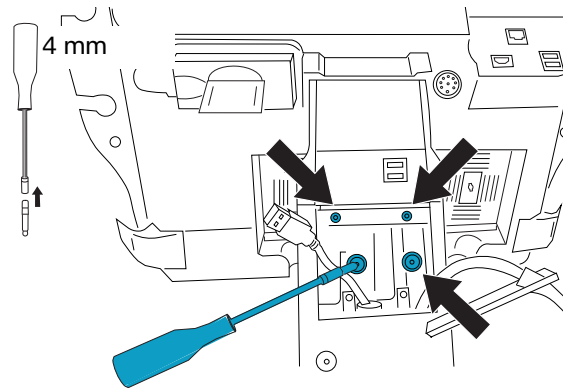




STEP 35

Connect the USB cable in the inner column to the USB port inside the platform.

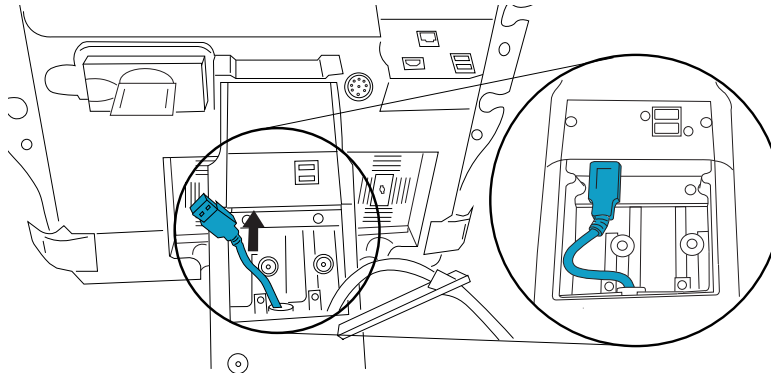


STEP 36

 Slide the power cable grommet into the column cover. Attach the column cover to the stand by tightening the two screws with the bit driver and the Phillips bit

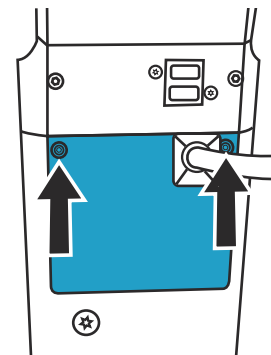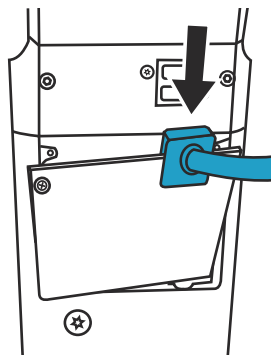

STEP 38


Connect the column power cable to the platform by pushing it into place and screwing it into the connector. Tug gently to make sure it is secure.

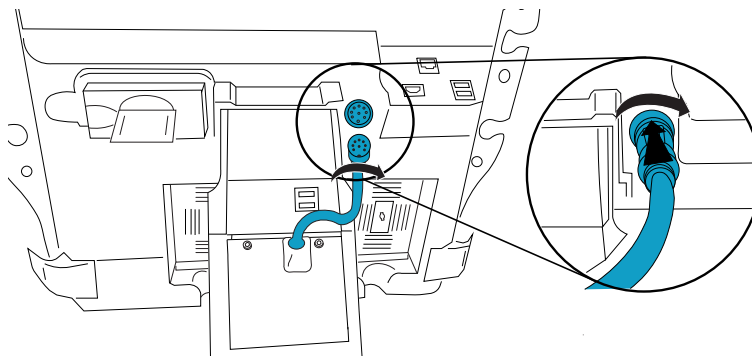


Connect the stand and printer to power

STEP 39

Connect AC power cord from the system box to the base of the stand.

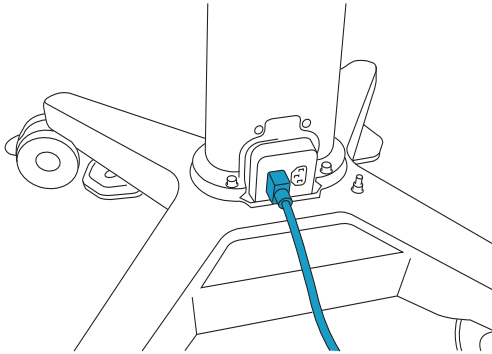


Connect the AC power cord to a hospital-grade AC mains outlet.

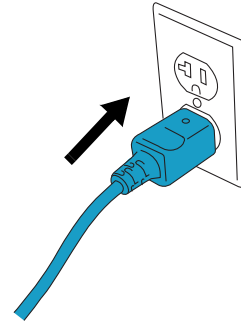


STEP 40

Connect the AC power cable to the printer, run the cable through the cable holder, and plug the cable into the stand.

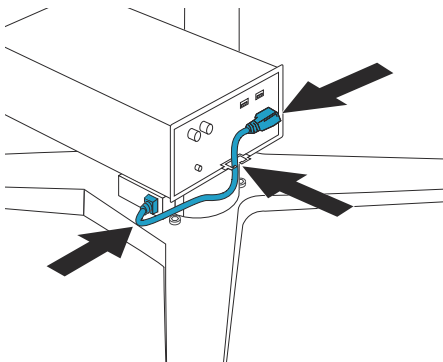


STEP 41

Connect the USB cable to the printer, and run the cable through the cable holder.

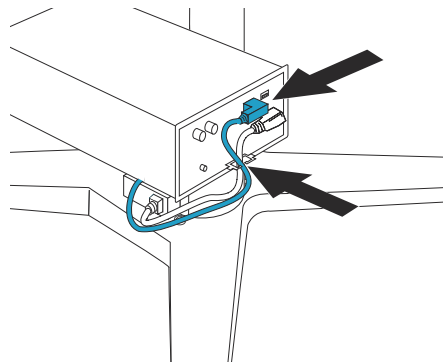


STEP 42

Plug the USB cable into the stand.

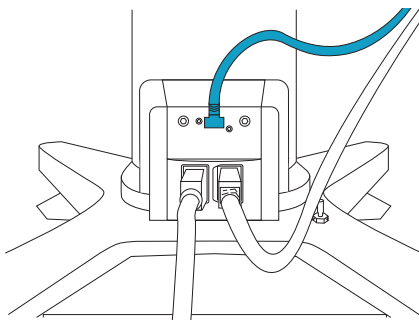


STEP 43

Attach the printer cover.

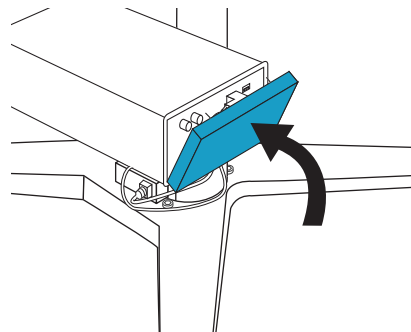

STEP 44

Push the power button to turn the printer on.

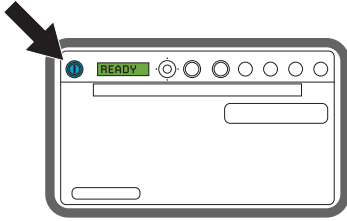

WARNING To avoid the risk of a shock hazard, do not plug the power cord into a multiple portable socket outlet (MPSO) or into an extension cord.



Cautions

- ▶ To avoid damaging the system, use only accessories and peripherals recommended by FUJIFILM Sonosite.
- ▶ Federal (United States) law restricts this device to sale by or on the order of a physician.

SONOSITE and the SONOSITE logo are trademarks and registered trademarks of FUJIFILM SonoSite, Inc., in various jurisdictions. FUJIFILM is a registered trademark of FUJIFILM Corporation. Value from Innovation is a trademark of FUJIFILM Holdings America Corporation.

All other trademarks are the property of their respective owners.

Published July 2021

Copyright © 2021 FUJIFILM SonoSite, Inc. All rights reserved.

Manufacturer

FUJIFILM SonoSite, Inc.
21919 30th Drive SE
Bothell, WA 98021 USA
T: +1-888-482-9449 or
+1-425-951-1200
F: +1-425-951-1201

EC Authorized Representative

FUJIFILM SonoSite B.V.
Joop Geesinkweg 140
1114 AB Amsterdam,
The Netherlands

Australia Sponsor

FUJIFILM SonoSite
Australasia Pty Ltd
114 Old Pittwater Road
BROOKVALE, NSW, 2100
Australia



P21940-04

